

# Next Stage of Polystyrene Toyo STYRENE Co., Ltd.

(Lineup of Toyo Styrene's High Functional Polystyrene)

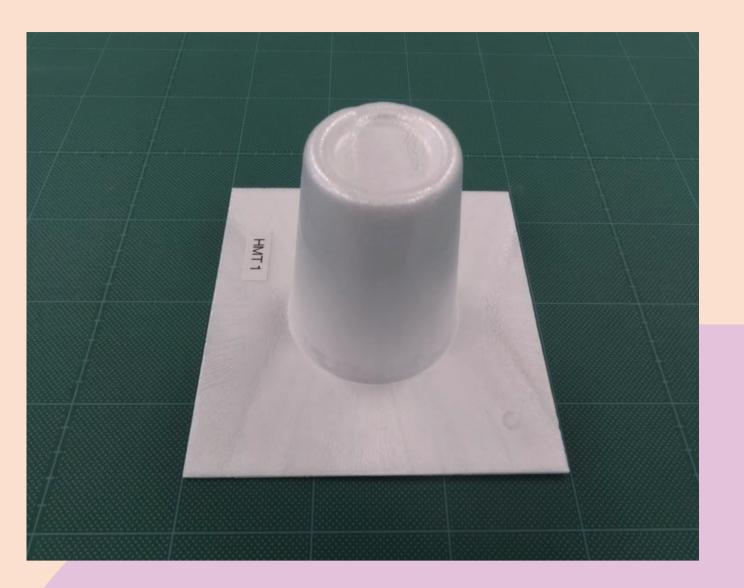

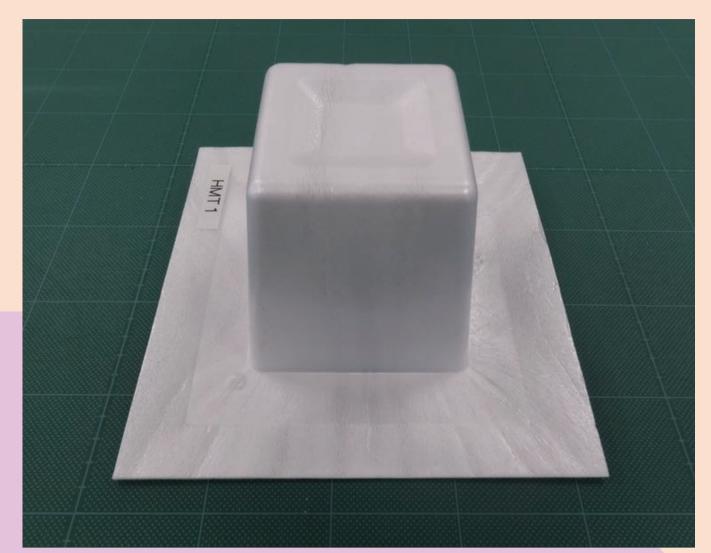

Example of Deep Drawing

## HMT-PS

(High Melt Tension PS)

Various Food Packages Foamed Deep Drawing Cups



Lid for Hot Drink Cup

### ESCR-HIPS

(Environmental Stress Cracking Resistance)

Lids for Hot Drink Cup Food Packages for Oily Food Improvement of Strength





# CULIVELLULICAL GPPS/HIPS

Heat Resistance

Minimize Residual Monomer/Oligomer

# TF-polymer/TFP

Microwavable Food Packages





Package for "DONBURI" Lunch Boxes

# High Purity GP/HI

Reduction of Gas evolution at Molding Reduction of Elute Materials from Packages








Packages of Low Volatile Monomer


### TOYO STYRENE High Functional GPPS and HIPS


#### 1. High Melt Tension Polystyrene(HMT-PS)

HMT-PS has very high Melt Tension and high Strain-Hardening property by our own polymerization technology. It is good material for SHEET/FILM production.


Forming productions of HMT-PS have good FORMABILITY, THICKNESS UNIFORMITY.

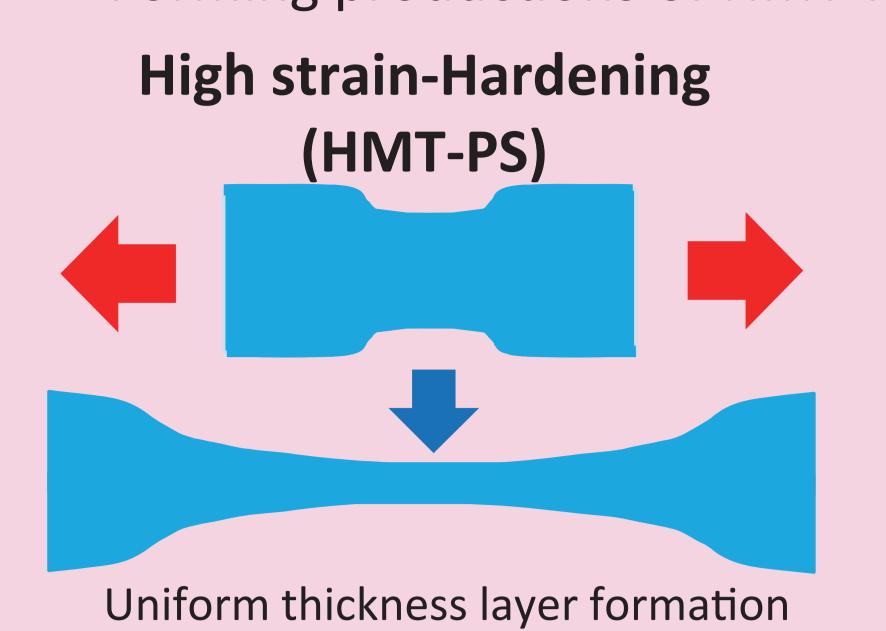

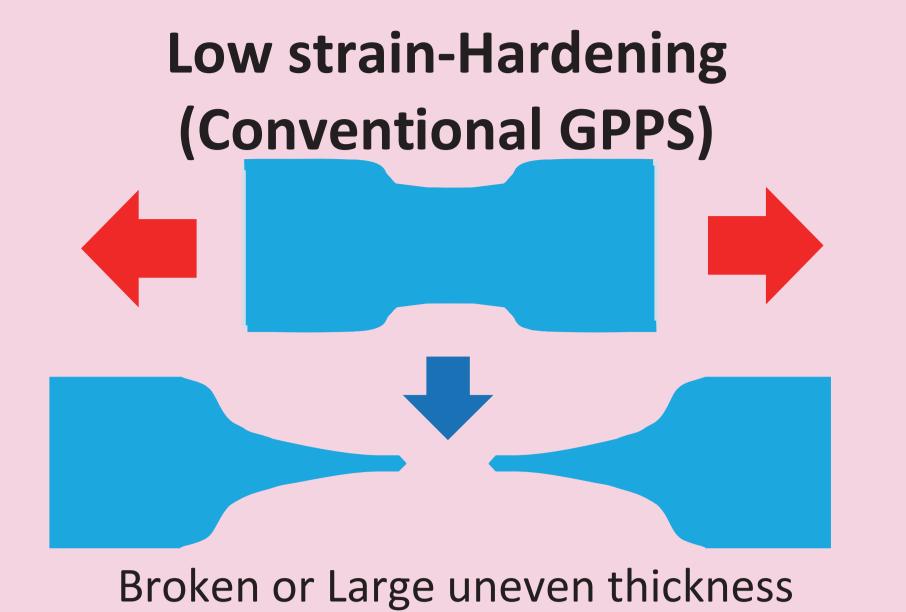

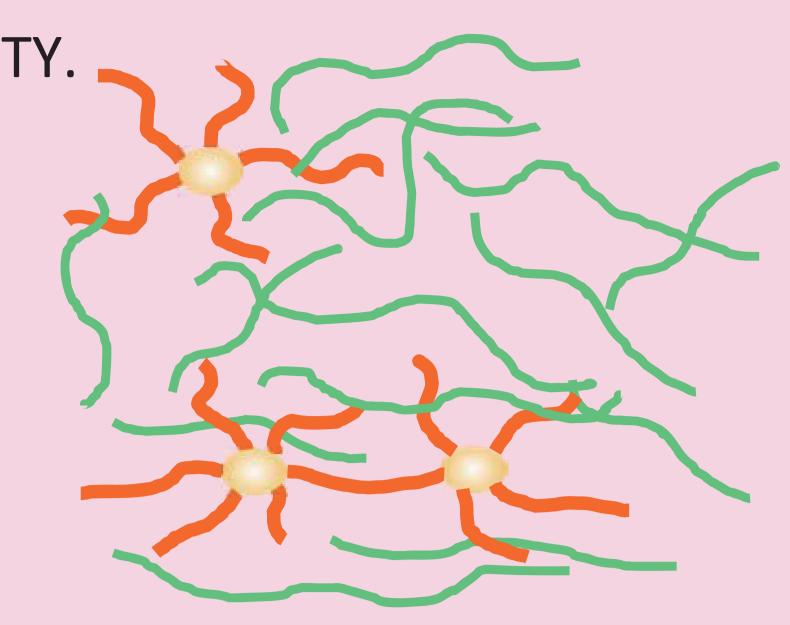

HMT-PS polymer structure image

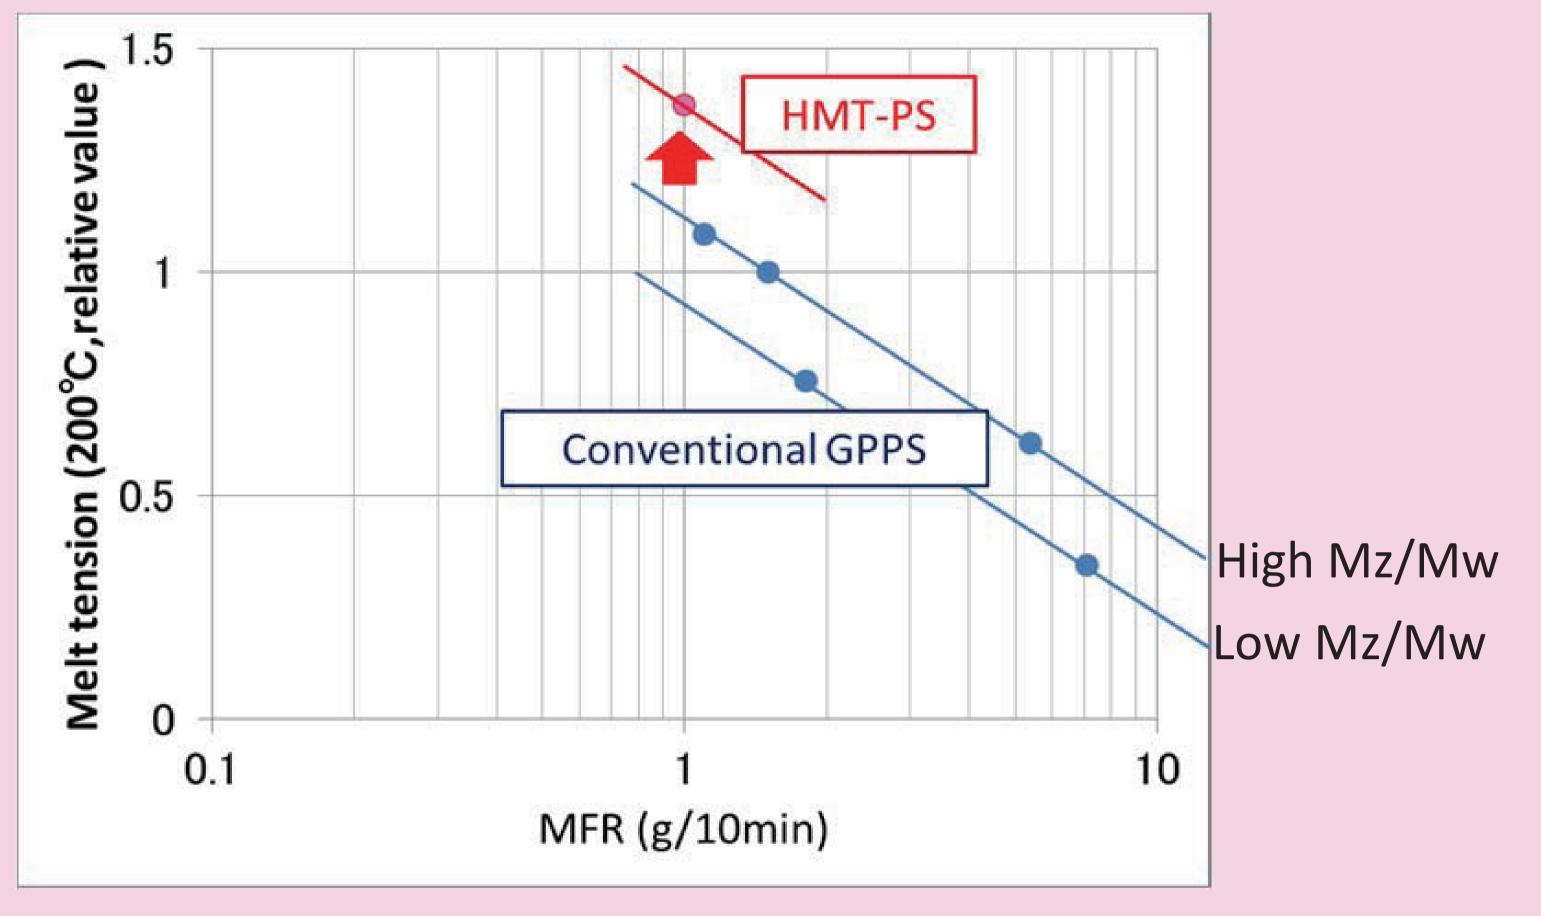

#### Physical properties of HMT-PS


	unit	HMT-PS
Melt mass flow rate	g/10min	1.0
Vicat softening temp.	°C	103
Charpy impact strength	kJ/m2	2.1
Tensile breaking stress	MPa	45
Tensile breaking strain	%	3
Flexural strength	MPa	100
Flexural modulus	MPa	3,200

#### [Application]


- Polystyrene Paper (PSP, Foamed expansion sheet for food container)
- Expanded Polystyrene board (XPS, Foamed heat insulation material)
- Biaxial oriented Polystyrene(BOPS)


- Injection blow formed productions
- Inflation films
- HIPS sheet formed package


#### [Forming test of PSP]

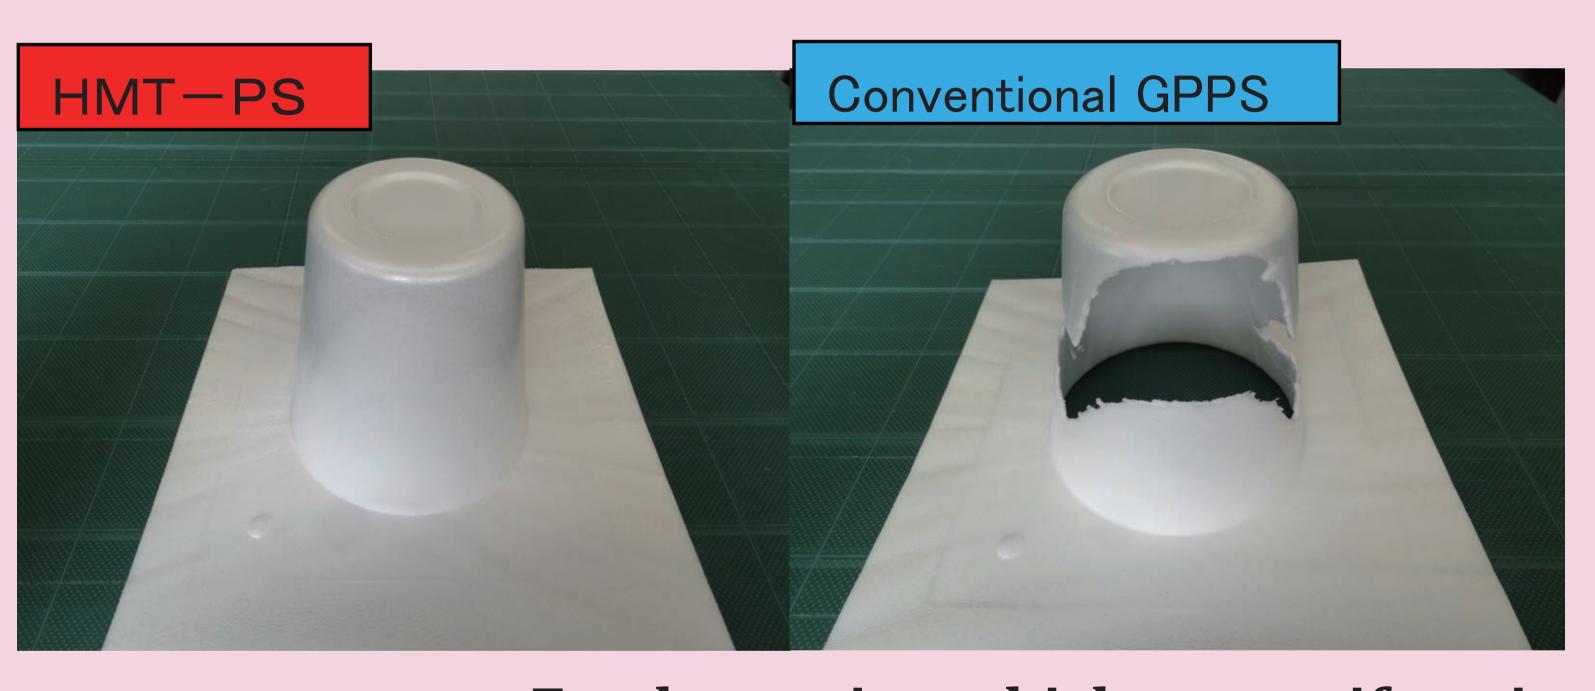


#### Forming samples with HMT-PS (PSP containers)

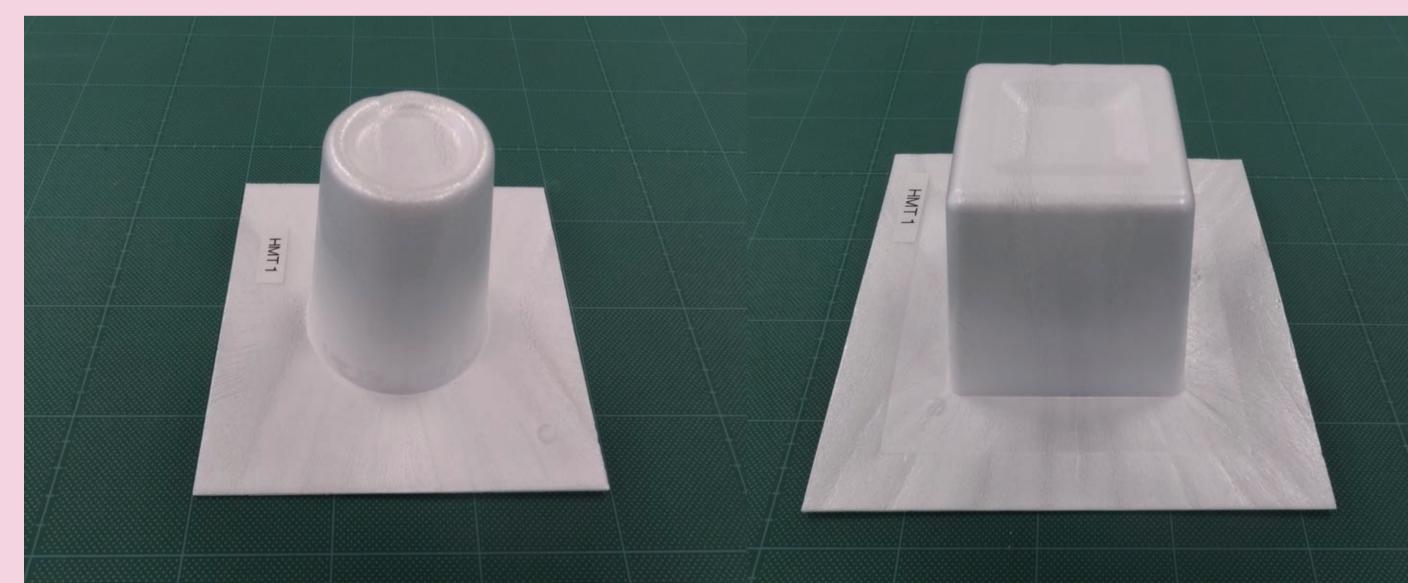

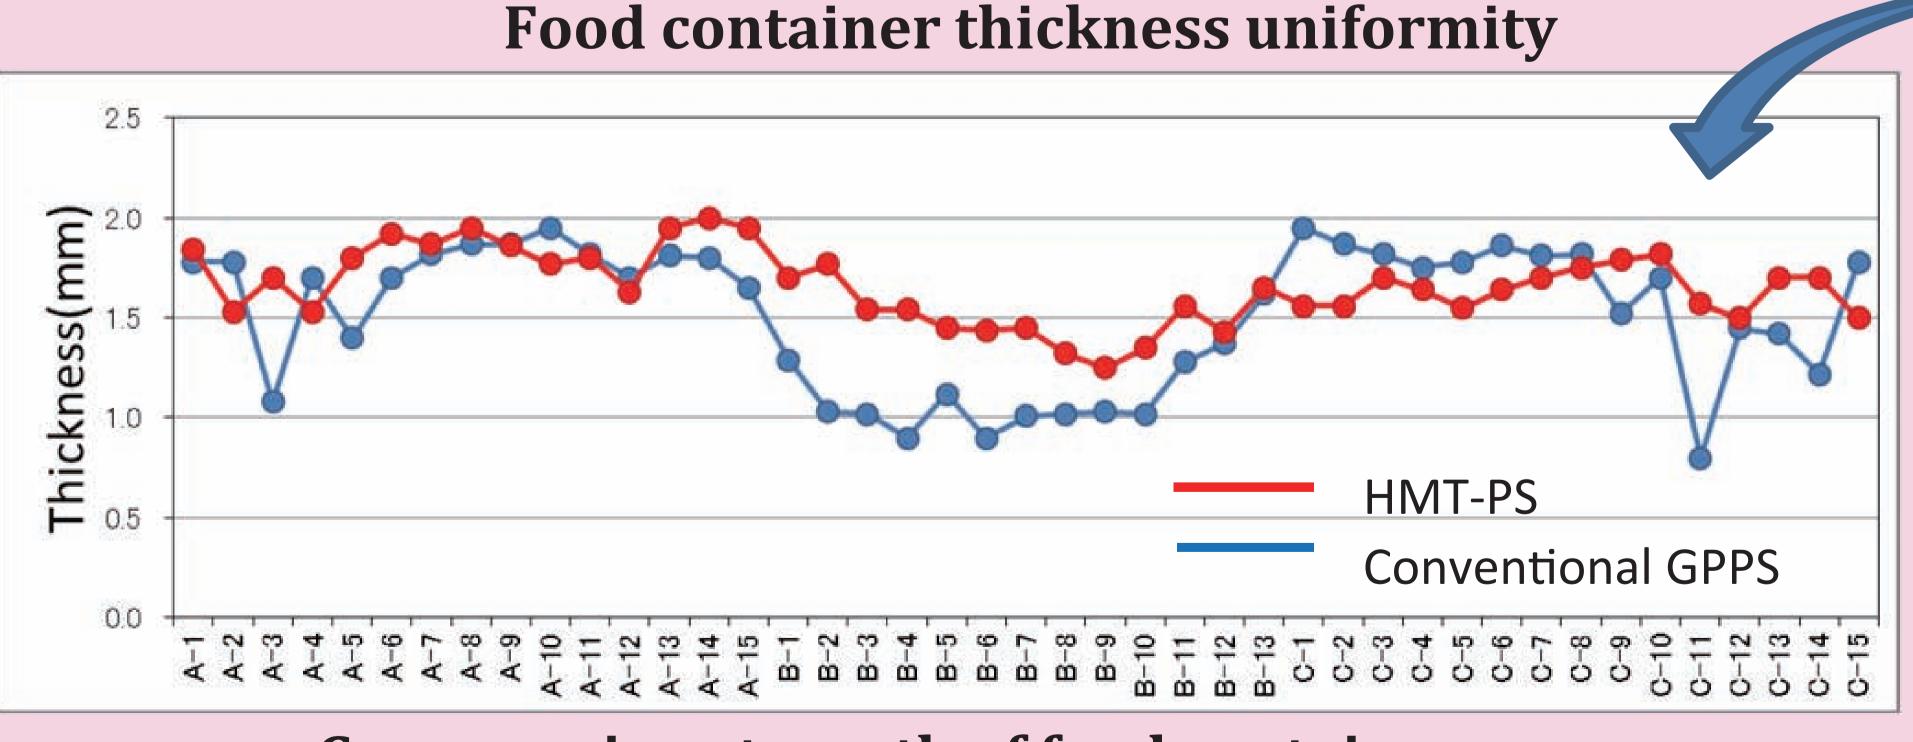

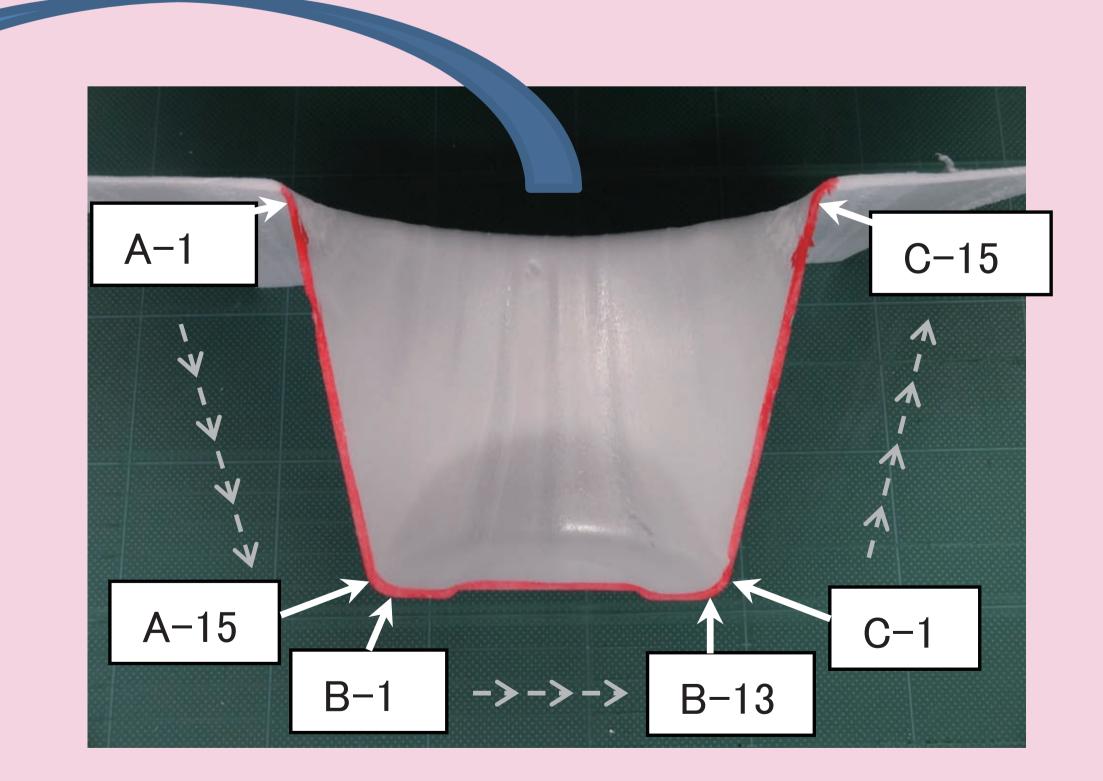

#### Compression strength of food container

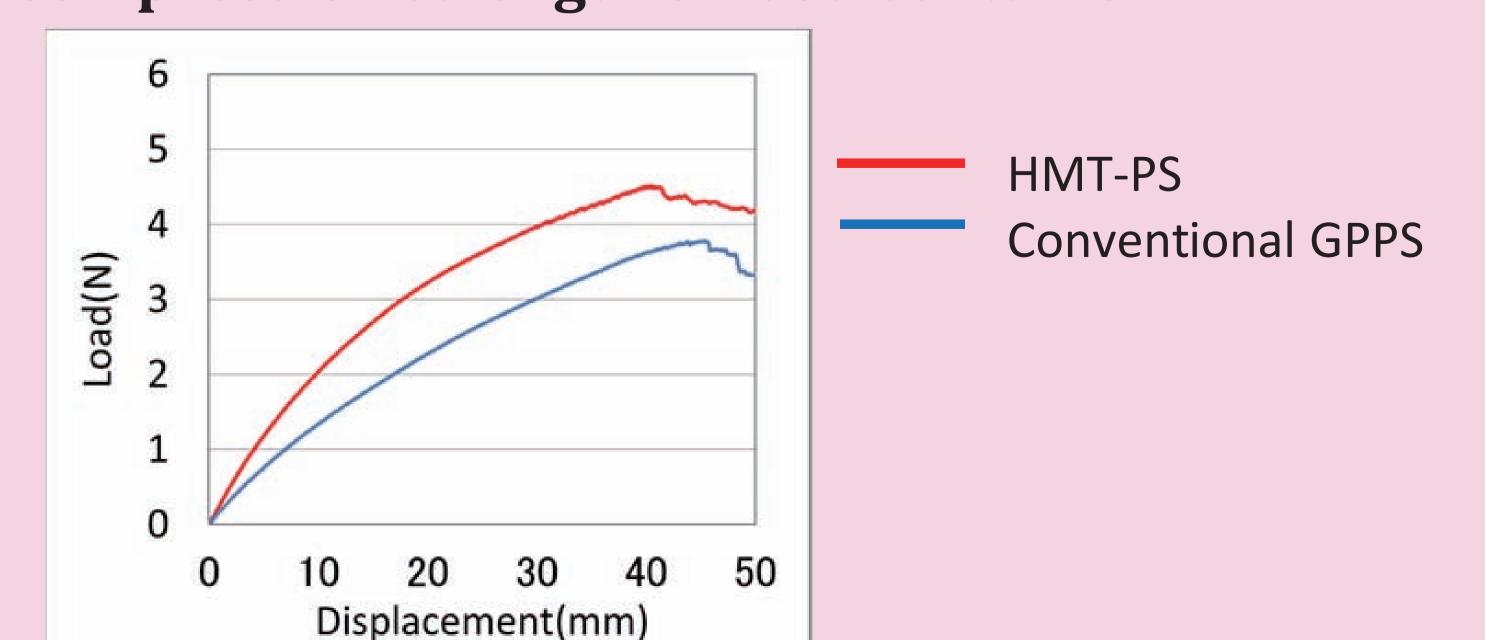

#### Measuring method



### TOYO STYRENE High Functional GPPS and HIPS

#### 2. ESCR-HIPS/Impact Modifier for HIPS

Improved Oil Resistance of HIPS by Polymerization Technologies

Application: Lids for Hot Drink Cup, Food Packages for Oily Food, Inner Panels of Refrigerator and so on Use as Impact Modifier Less Expensive, Substitute for SBR (Enable to Reduce Cost 5-15%)




Lid for Hot Drink Cup



Inner Panels of Refrigerator

#### Resistance Test for HIPS and Various Oil

	Conventional HI		ESCR-PS	
Aging time	1hour	24hours	1hour	24hours
Rapeseed oil	Poor	Poor	Good	Good
Sesami oil	Good	Poor	Good	Good
Olive oil	Poor	Poor	Good	Good
Rice oil	Good	Poor	Good	Good
Butter	Good	Poor	Good	Good
Lard	Good	Poor	Good	Good
Fresh cream	Poor	Poor	Good	Good

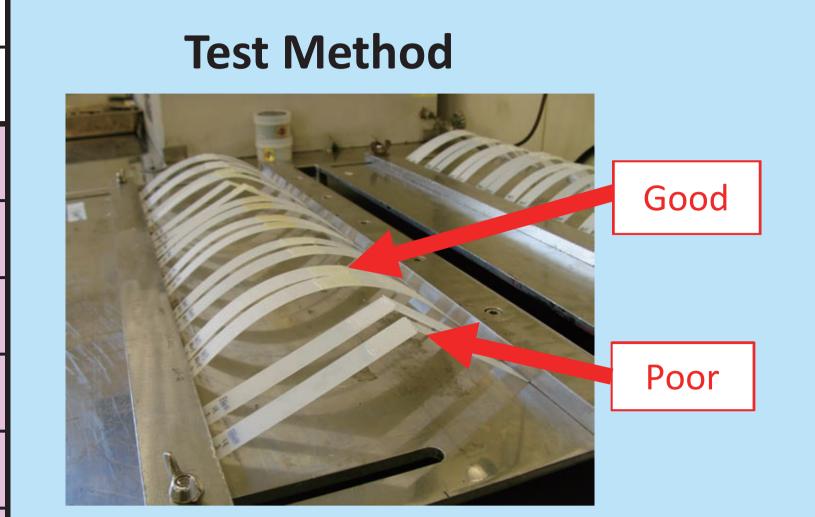

**Physical Properties** 

Properties	Test method	unit	
Melt mass flow rate	ISO 1133	g/10min	3.3
Vicat softening temp.	ISO 306	°C	88
Charpy impact strength	ISO 179	kJ/m <sup>2</sup>	19
Tensile breaking stress	ISO527-1,527-2	MPa	22
Tensile breaking strain	ISO527-1,527-2	%	70
Flexural strength	ISO 178	MPa	38
Flexural modulus	ISO 178	MPa	1750

#### **Resistance Test for HIPS and Various Kitchen Items**

	Conventional HI		ESCR-PS	
	Critical Strain (%)	Judge	Critical Strain (%)	Judge
Soy Sauce	0.2	Poor	>1.1	Good
Ketchup	0.2	Poor	>1.1	Good
Vinegar	0.3	Poor	>1.1	Good
Detergent (neutral)	0.2	Poor	0.5	Fair
Detergent (alkaline)	0.5	Fair	>1.1	Good


Critical Strain: Calculated by Defined Formula and Cracked Point (Toyo Styrene Method)



#### 3. Improvement of Heat Resistance

Improved Heat Resistance of Polystyrene, then named "TF-polymer" and "TFP" with Higher Strength Application: Microwavable and the other Food Packages, Foamed PS Tray and so on

#### **Heat Resistance of Various Polystyrene**

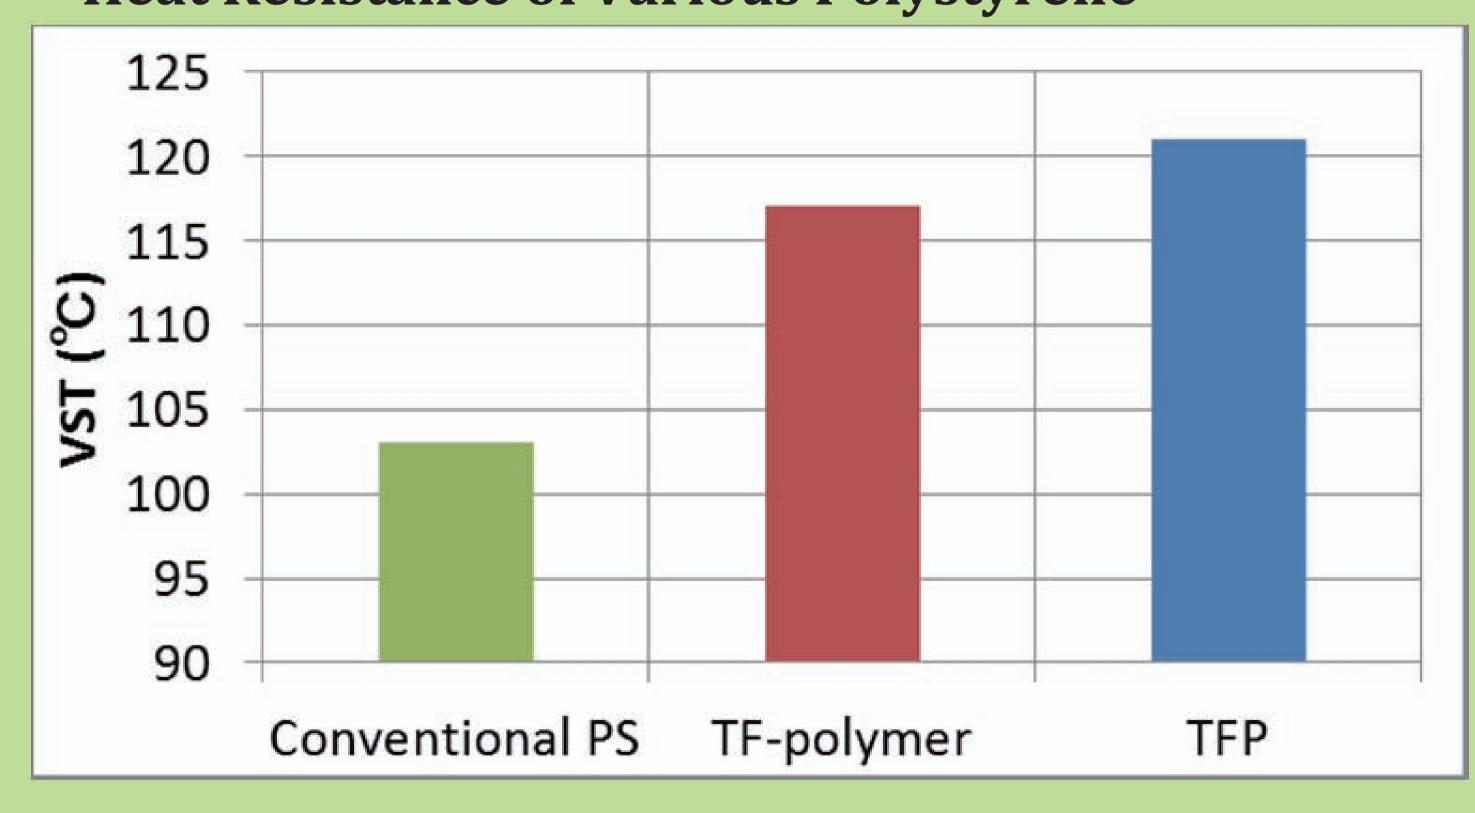



Package for "DONBURI"




**Lunch Boxes** 

### 4. Reduction of Residual Monomer & Residual Oligomer

Reduced Residual Monomer and Oligomer by Special Equipment and Polymerization Technologies

Application: Food Packages
Residual Monomer of Various Grade

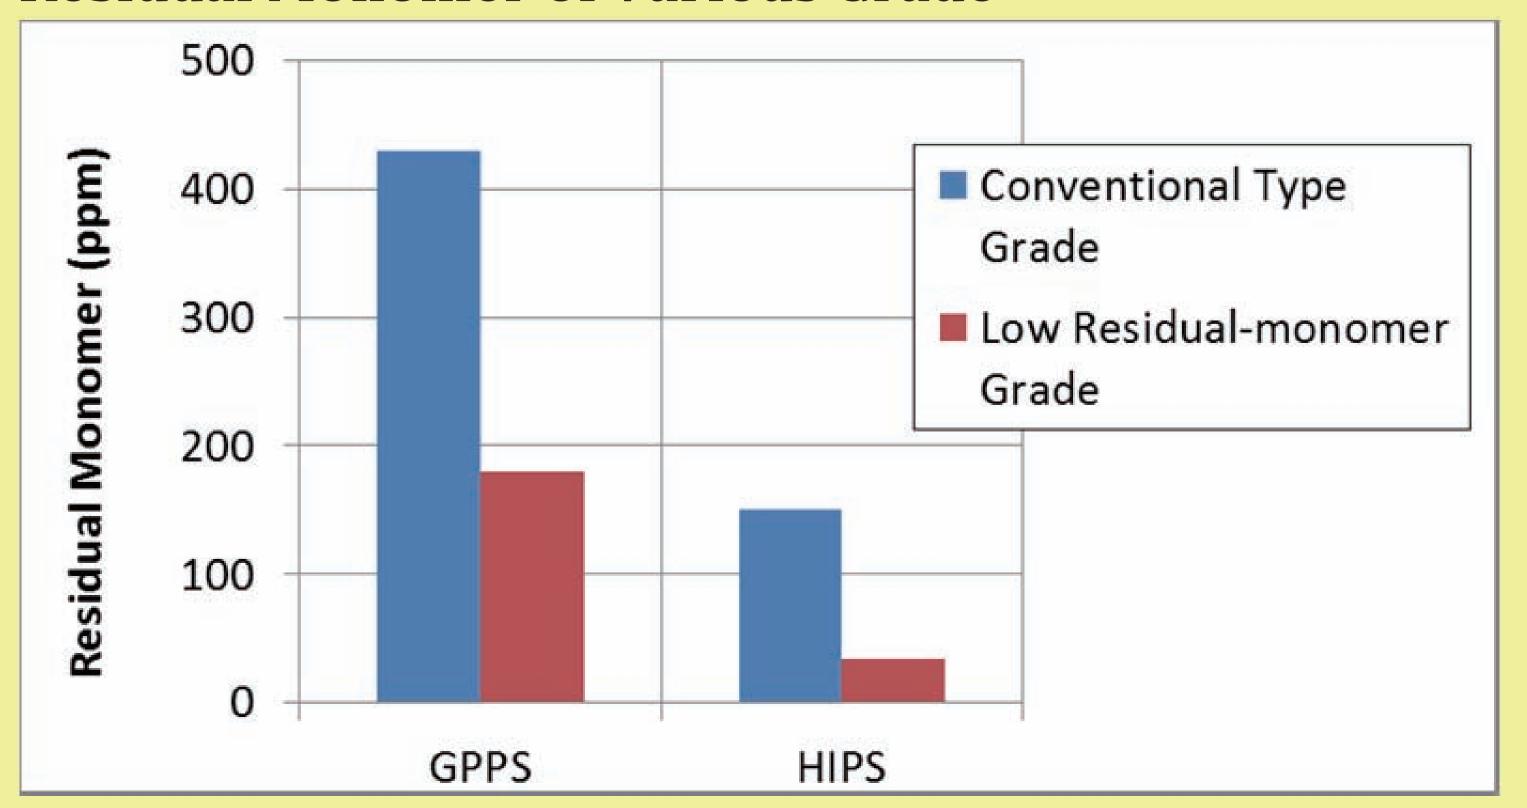

#### Residual Oligomer of Various Grade

